


Installation Instructions LED Floodlight CE5 Series & CE5-PIR

This product must be installed in accordance with the Building Regulations and carried out by a qualified electrician in accordance with the relevant IEE wiring regulations. **Warning**, this product carries mains voltages and can cause serious electrical shock. Switch off the mains before commencing installation and remove the appropriate circuit fuse.

Mains wiring

The mains cable connection if located outside must be made in a suitably rated IP enclosure Cable colours are given below.

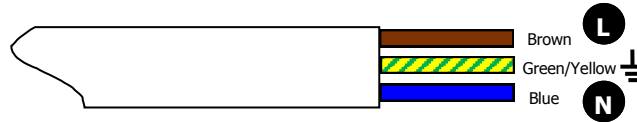


Optional PIR. As standard your CE5 floodlight is not fitted with a PIR.

Fitting a CE5 PIR. IMPORTANT *Ensure that the mains supply has been switched off and isolated.* Remove the PIR blanking cap.




A shorting link plug is now visible, remove it.

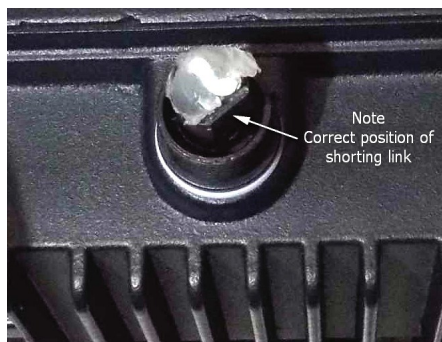

The CE5 PIR has a key way and can only be inserted in one position. The key way is a flat surface opposite.

Fit the PIR and retain the blanking cap and shorting link.

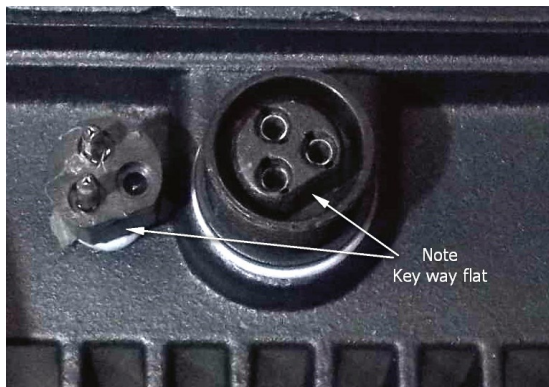

PIR settings. The two controls Lux and Time. Time controls the amount of time the LED operates for (fully clock wise 10 seconds) and approximately fully counter clock 15 minutes. The LUX control sets the on/off operation dependant upon the amount of day light, setting to fully counter clock wise sets the operation to night time only. The PIR sensor has two modes. Switch on the power for the first time, the flood is in Auto Mode. Switch the internal wall switch (off/on 4 times) within a few seconds, the flood will be on continuously. Switch off the wall switch, waiting about 10 seconds, then switch on the wall switch again, the PIR sensor is back in Auto Mode.

NOTE. INSERTING THE SHORTING LINK IN THE WRONG POSISTION WILL CAUSE THE MAINS SUPPLY TO TRIP.



Diamond LED Lighting Ltd.
Congleton, Cheshire, UK
www.diamondledlighting.co.uk

3 year warranty
Rev E 19th Jan 2018